

# ELEVATOR USE INSTRUCTIONS



## ELEVATOR USE INSTRUCTIONS

- Do not allow anyone under the age of 12 to ride the elevator alone.
- When getting on the elevator, step into the cabin by seeing the cabin.
- Do not take the elevator by walking backwards.
- Do not act distractingly while entering and exiting the elevator.
- Do not force the doors to open or close in an unusual way.
- In cabins without a door, do not stand on the side of the moving door while driving in the cabin and take precautions so that you or your belongings do not come into contact with the wall on the door side.
- It is of great importance for users to load the loads in the cabin evenly and prevent them from slipping.
- Have the periodic maintenance of your elevator done by an elevator company that has the qualification of a maintenance company at the intervals specified by your installation company.
- Do not try to get out by breaking the door glass
- Do not try to get out by opening the rescue cover (if any), this cover can only be opened when rescue operation is performed from the outside.
- Make sure that places such as the engine room of your elevator or the rescue hatches, if any, are locked and the keys are in a place where the authorities can easily reach them in case of failure.
- Do not keep the buttons pressed continuously to call the elevator.
- Follow the instructions of the elevator company or the maintenance company in rescuing the people who are between floors in the elevator.
- Do not allow unlicensed or untrained persons to intervene to rescue occupants or repair the elevator.
- Remember !!! The majority of accidents in elevators occur during mishandling - RESCUE operations.